




Vacuum Chamber Solutions

World's broadest portfolio of polymer solutions for use in vacuum chamber applications

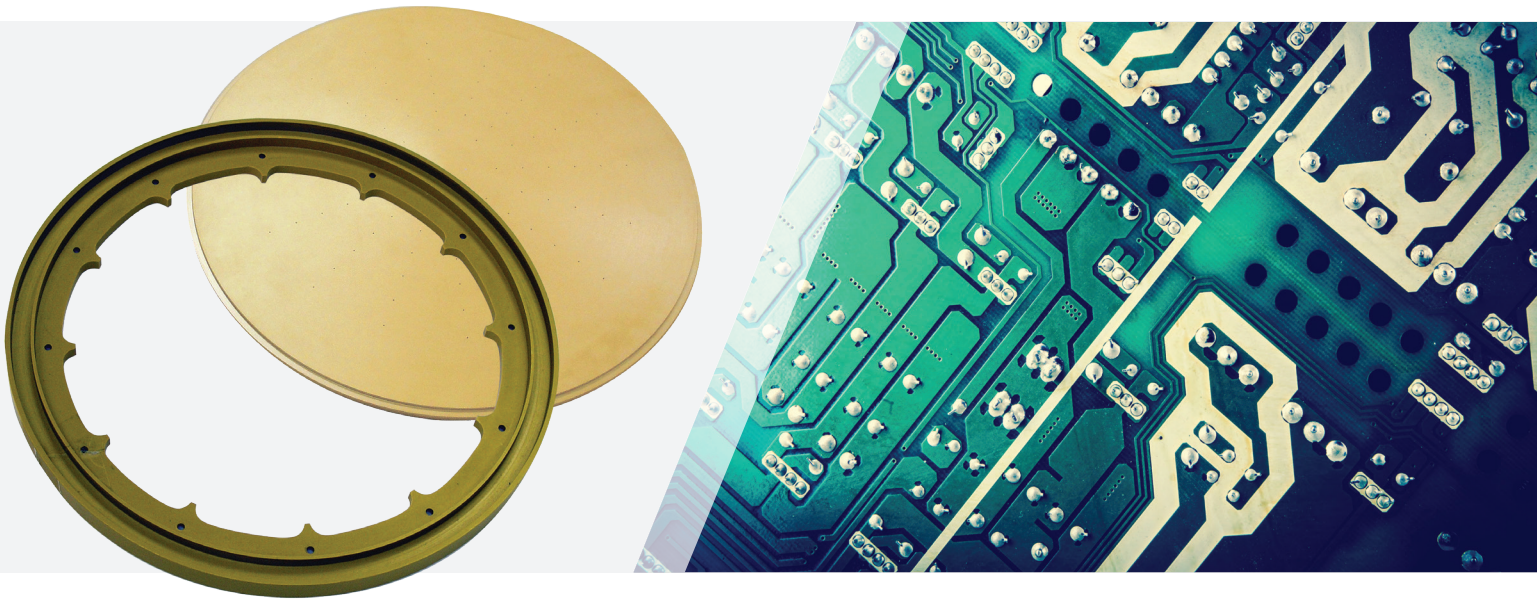

Typical Process Tools: Etch, CVD, PVD & Ion Implant

Material Solutions & Key Properties




- **Ketron® 1000 PEEK**
For use in lower power, lower heat (300°F) or indirect plasma chamber applications such as wafer mobility.
- **Duratron® T4203 PAI**
For use in medium power, medium heat (500°F) applications or indirect chamber applications in presence of Oxygen plasma.
- **Duratron® CU60 PBI**
For use in high power, high heat (750°F) applications or indirect chamber applications when in the presence of Oxygen plasma.
- **Semitron® MPR-1000**
For use in high power, medium heat (520°F) applications. Best in class when in presence of Oxygen plasma.

General Trends

- Increasing energy in plasma chambers
- More aggressive plasma chemistries, introduction of Oxygen into the chambers
- Pinpoint material selection on a per application basis to maximize “cost vs. performance”
- Replacement of polyimide for reduced cost & increased performance
- Careful use of ceramics & Quartz due to cost & breakage
- Increased requirements for ionic purity due to reduced node size

Typical Applications

- Screws & Pins
- Valve Housings
- Clamp & Trench Rings
- Shower Heads
- Various Etch & CVD Parts

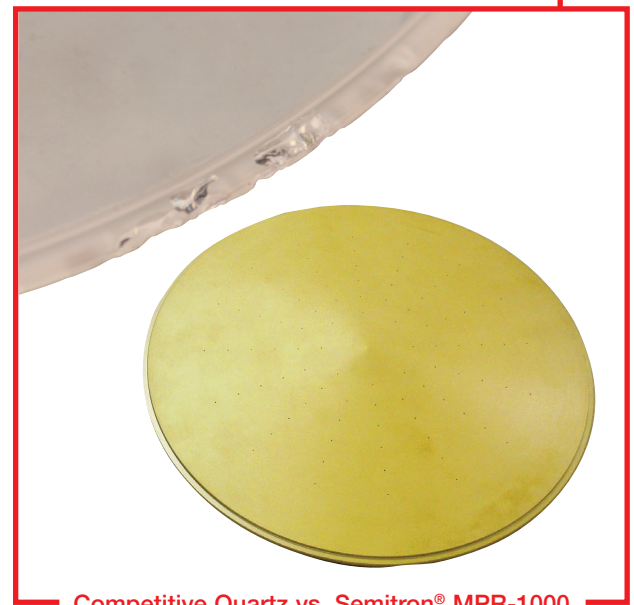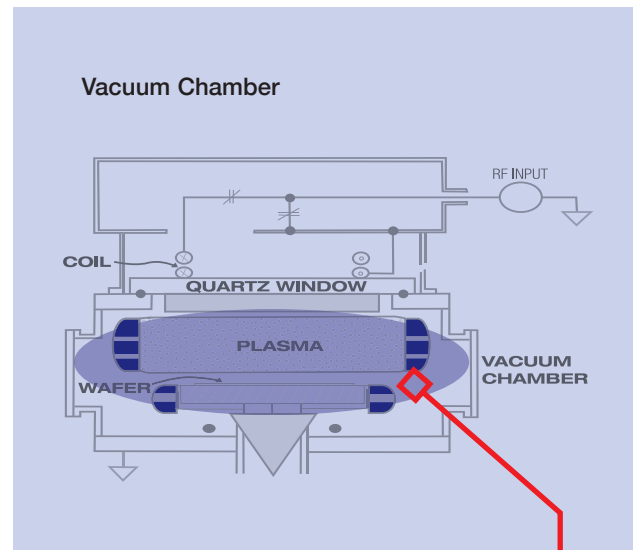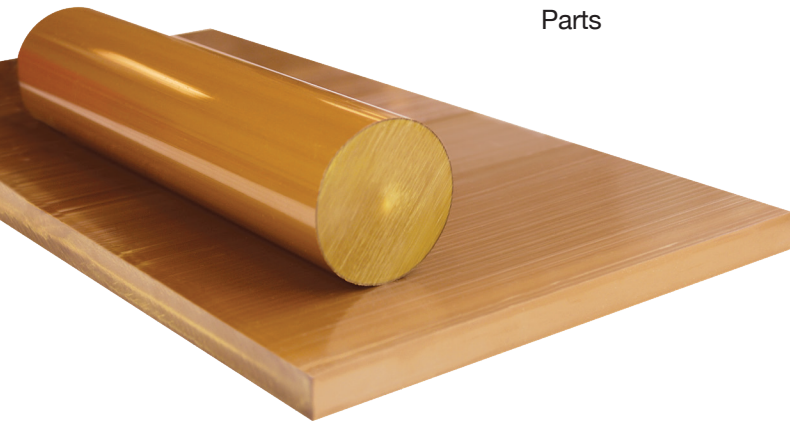

Competitive Quartz vs. Semitron® MPR-1000

Competitive Quartz (left) is much more brittle than Semitron® MPR-1000 (right) often chipping in vacuum chambers

Introducing: Semitron® MPR-1000


Semitron® MPR-1000 was developed to provide engineers with a viable polymer-based option when confronted with the increasing demands in vacuum plasma based chamber design due to use of Oxygen to clean the chamber and the rapidly increasing electrode power.

Product Features

- Excellent plasma resistance in Oxygen plasma, approaches Quartz
- 12-25X* better than polyimide in Oxygen plasma
- Excellent chip resistance, durability & machinability compared to Quartz
- Lowest overall cost of any polymer solution
- Excellent ionic purity

Chamber Conditions

• 1KW • CF 1200 sccm • 0.32 Torr • 50 hours

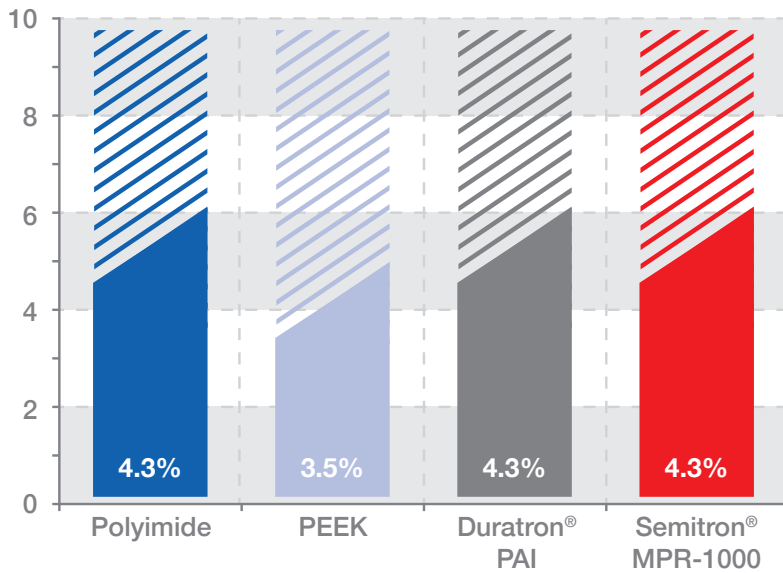

Percent Weight Loss in CF₄ Plasma - Low Energy

- Most advanced engineering plastics perform similar in freon plasma gases
- The mode of degradation is mechanical erosion, a function of surface hardness & type of solid, crystalline vs amorphous




PEEK



PAI



Polyimide

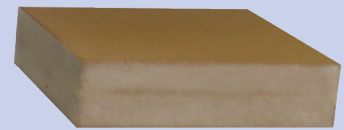


Semitron[®] MPR-1000

Percent Weight Loss In O₂ Plasma - 2kw

- Advanced engineering plastics mode of degradation in Oxygen plasma is catastrophic oxidation
- Semitron[®] MPR-1000 was developed to withstand the typical erosion experienced in Oxygen plasma chambers
- Semitron[®] MPR-1000 displays 10X better results than PEEK and 6X better results than polyimide in a 2KW Oxygen plasma chamber and up to 25X better results than polyimide at 2.5KW Oxygen plasma

Chamber Conditions

• 2KW • O₂ 1200 sccm • 0.30 Torr • 50 hours • 13.56 MHz

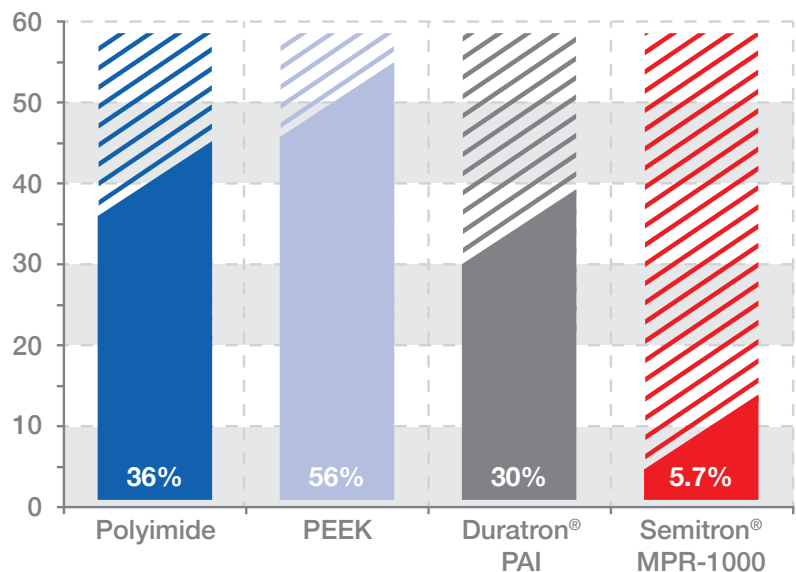

Ionic Purity Data

	Aluminum (Al)	Barium (Ba)	Calcium (Ca)	Chromium (Cr)	Copper (Cu)	Iron (Fe)	Lead (Pb)	Lithium (Li)	Magnesium (Mg)	Manganese (Mn)	Nickel (Ni)	Potassium (K)	Sodium (Na)	Strontium (Sr)	Titanium (Ti)	Zinc (Zn)
Semitron® MPR-1000	0.14	0.07	2.8	2.6	0.14	2.3	0	0	0.3	0.11	0.36	0.77	4.4	0.04	0.12	0
Ketron® PEEK	0.38	0.02	8	0.49	0.2	6	0.005	0.005	0.8	0.2	0.42	1.6	480	0.06	0.18	0.15
Standard Polyimide	0.47	0.05	0.01	0.01	0.05	0.36	0.05	0.05	0.28	0.02	0.02	0.13	0.44	0.05	0.05	0.02
Semitron® MPR-1000	0.14	0.07	2.8	2.6	0.14	2.3	0	0	0.3	0.11	0.36	0.77	4.4	0.04	0.12	0
Standard Polyimide	17.68	1.88	0.38	0.38	1.88	13.55	1.88	1.88	10.54	0.75	0.75	4.89	16.56	1.88	1.88	0.75

■ by Total Digestion ■ Adjusted for Mass Loss During Erosion 2.5 KW • 2000 sccm • O₂

Material Comparison Guide

			Standard Polyimide	Duratron® CU60 PBI	Ketron® 1000 PEEK	Semitron® MPR-1000	Duratron® T4203 PAI
Mechanical Properties	Tensile Strength (psi)	D638	12,500	16,000	16,000	17,000	20,000
	Tensile Modulus (psi)	D638	-	850,000	630,000	1,200,000	600,000
	Flexural Strength (psi)	D790	16,000	32,000	25,000	24,000	24,000
	Flexural Modulus (psi)	D790	450,000	950,000	600,000	1,050,000	600,000
	Hardness Rockwell	D785	M82	M125	M100	M106	M120
	Moisture Absorption 24hrs @73°F (%)	D570 ⁽²⁾	0.24	0.40	0.10	0.28	0.40
	Moisture Absorption @ Saturation (%)	D570 ⁽²⁾	1.5	5.0	0.5	3.4	1.7
Thermal Prop.	CLTE (in./in./°F)	E-831 (TMA)	3.0 x 10 ⁻⁵	1.3 x 10 ⁻⁵	2.6 x 10 ⁻⁵	1.5 x 10 ⁻⁵	1.7 x 10 ⁻⁵
	Heat Deflection Temperature @66psi (°F)	D648	632	800	320	534	532
Electrical Properties	Dielectric Constant @ 1 Hz	D150	4.20	3.20	3.30	3.68	4.20
	Dissipation Factor @ 1 Hz	D150	0.0034	0.0030	0.0030	0.0080	0.0260
	Dielectric Strength	D149	560	550	480	570	580
	Ionic Purity	-	excellent	good	fair	excellent	good

(1) Data represents our estimated maximum long-term service temperature based on practical field experience.

(2) Specimens: 1/8" thick x 2" diameter or square.

(3) Estimated rating based on available data. The UL-94 Test is a laboratory test and does not relate to actual fire hazard.

mcam.com |    @MCAMconnect | contact@mcam.com

Distributed by:

Distributed by:



Piedmont Plastics®
where solutions take shape

For more information visit
www.piedmontplastics.com

All statements, technical information and recommendations contained in this publication are presented in good faith and are, as a rule, based upon tests and such tests are believed to be reliable and practical field experience. The reader, however, is cautioned, that Mitsubishi Chemical Advanced Materials does not guarantee the accuracy or completeness of this information and it is the customer's responsibility to determine the suitability of Mitsubishi Chemical Advanced Materials' products in any given application. Duratron, Ketron, Semitron, and Kyron are a registered trademark of the Mitsubishi Chemical Advanced Materials group of companies.

Design and content created by Mitsubishi Chemical Advanced Materials and are protected by copyright law. Copyright © Mitsubishi Chemical Advanced Materials. All rights reserved. MCM NA 61 | 6.12.19

